

One Year Limited Warranty

The manufacturer warrants every Biffy product to be free from manufacturing defects under normal use for a period of one year from the date of purchase. This warranty is extended only to the original purchaser.

Terms of Warranty:

The American Biffy Company, Ltd. will repair or replace, at their discretion, products or parts found to be defective. Our liability is limited to repair or replacement only and we are not liable for consequential or incidental damages. There are no implied or expressed warranties. Shipping charges to the manufacturer are non-refundable.

Limitations of Warranty:

This limited warranty does not cover (1) Damage or loss sustained in a natural occurrence, i.e. earthquake, fire, etc., (2) Damage or loss due to improper installation, negligence, misuse or abuse and (3) Damage or loss resulting from foreign materials or chemicals in water supply.

Warranty Service:

To obtain warranty repair or replacement, contact manufacturer at:

American Biffy Company, Ltd.
706 Wells Road
Boulder City, NV 89005 USA
702-294-0055 Telephone
702-294-0649 Fax
Sales@biffy.com Email

American **Biffy**® Company


Visit our website for new product news
www.biffy.com



Congratulations on your purchase of a Biffy®
Ambient Warmer!



Installation Tools Needed

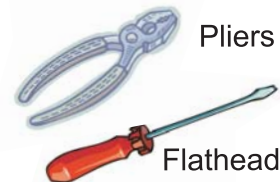

Pliers

Flathead

Parts included in Package



Biffy®
**Ambient
Warmer**

If you already
have an
existing Biffy:




Hose
clamp

Brass
barb

Please Read ALL installation instructions carefully prior to installation.

Biffy Ambient Warmer Installation Diagram

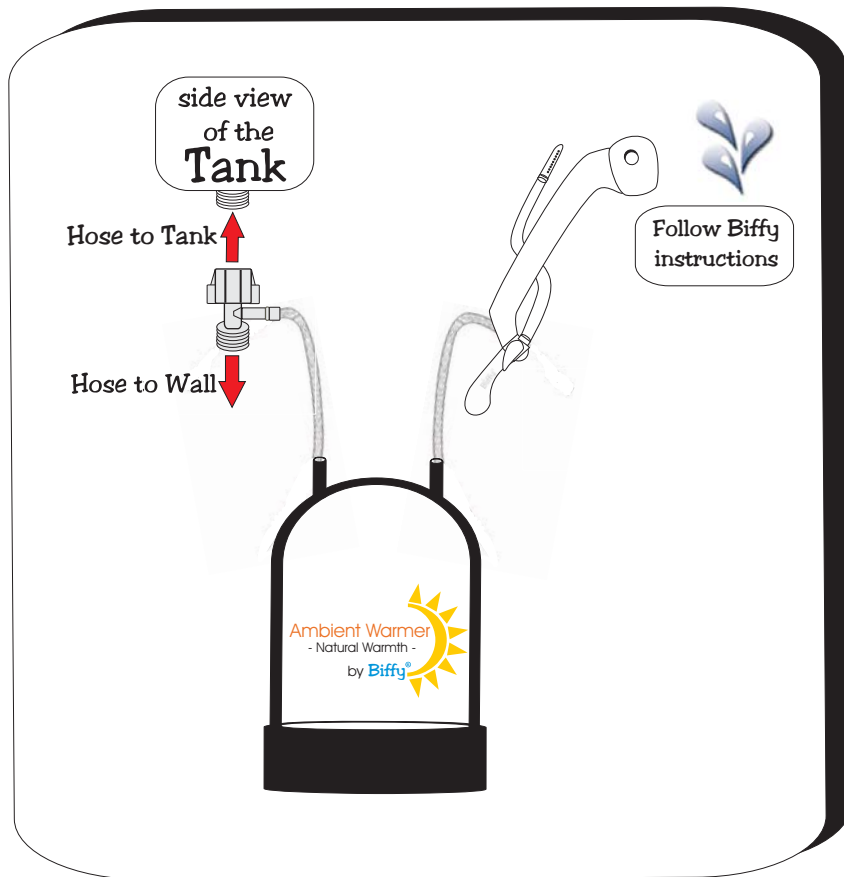

IMPORTANT: The Biffy Ambient Warmer is a unique reservoir that allows water to reach the temperature of the surrounding air. The ambient warmer is not intended to heat the water, but to remove the chill for cooler climates. The water warms to room temperature at a rate of approximately 6 degrees F per hour.

Step 1 - Connect to Water Supply

Turn off the water supply at the wall. Unscrew the water supply line and insert the **Biffy** T-adapter between the tank and the supply line. Tighten all fittings.

Step 2 - Attach to Biffy

A - New Biffy

Your new Biffy is already attached to the warmer. Please follow the Biffy installation instructions to attach your Biffy to the toilet. Turn on the water supply at the wall to fill the ambient warmer reservoir.

B - Existing Biffy

Cut the water line approximately two inches from the brass edge of the Biffy T-Adapter. Place the hose clamp over the hose connected to the Biffy. Push hose onto barb of ambient warmer. Tighten clamp over barb using a phillips screwdriver. **Please ensure hose clamp is sufficiently tightened, as the American Biffy Company, Ltd. is not responsible for any leaks.** Turn on the water supply at the wall to fill the ambient warmer reservoir.

IMPORTANT: Check for any water leakage. As with all plumbing appliances, if your Biffy Ambient Warmer is unattended for a great period of time, we advise the water supply be turned off.