

One Year Limited Warranty

The manufacturer warrants every Biffy product to be free from manufacturing defects under normal use for a period of one year from the date of purchase. This warranty is extended only to the original purchaser.

Terms of Warranty:

The American Biffy Company, Ltd. will repair or replace, at their discretion, products or parts found to be defective. Our liability is limited to repair or replacement only and we are not liable for consequential or incidental damages. There are no implies or expressed warranties. An RMA number must be obtained from the American Biffy Company, Ltd. before unit is shipped back for repair or replacement. All Biffy units must be cleaned before shipment to the manufacturer or product will not be repaired or replaced. Shipping charges to the manufacturer are non-refundable.

Limitations of Warranty:

This limited warranty does not cover (1) Damage or loss sustained in a natural occurrence, i.e. earthquake, fire, etc., (2) Damage or loss due to improper installation, negligence, misuse or abuse and (3) Damage or loss resulting from foreign materials or chemicals in water supply.

Warranty Service:

To obtain warranty repair or replacement, contact manufacturer at:

American Biffy Company, Ltd.
706 Wells Road
Boulder City, NV 89005 USA
702-294-0055 Telephone
702-294-0649 Fax
Sales @biffy.com Email


Congratulations on your purchase of a Biffy®
"You'll Love Your Biffy®!"

Installation Instructions



Please Read ALL installation instructions carefully prior to installation.


Installation Tools Needed

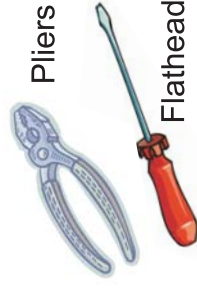

Pliers

Flathead

Parts included in Package

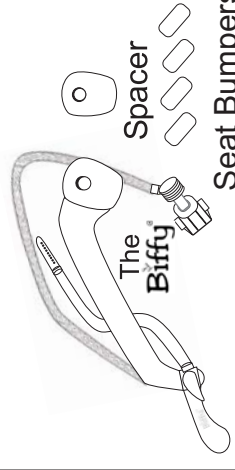

Spacer

Seat Bumpers

American Biffy® Company

Visit our website for new product news
www.biffy.com

U.S. Patent No. 5,933,881 & 6,487,732
Other U.S. And International Patents Pending

IMPORTANT: The Biffy® is designed for use with solid toilet seats. Soft, cushioned seats may restrict the use of the spray arm. We recommend replacing a soft, cushioned seat with a solid seat prior to installation.

Step 1- Remove Toilet Seat

Remove the toilet seat using a standard flathead screwdriver and pliers.



1

Step 2- Position the Biffy on the rim of the toilet bowl & replace the seat

Align the Biffy bracket with the left toilet seat hole. The spray arm will rest in the bowl below the toilet seat. Place the spacer over the right seat hole and replace the toilet seat.




2

***DO NOT OVER TIGHTEN TOILET SEAT SCREWS**

Step 3- Connect to Water Supply

Turn off water supply at the wall. Unscrew the water supply line and insert the Biffy T-adapter between the tank and the supply line. Tighten all fittings. Hand tightening is usually sufficient.

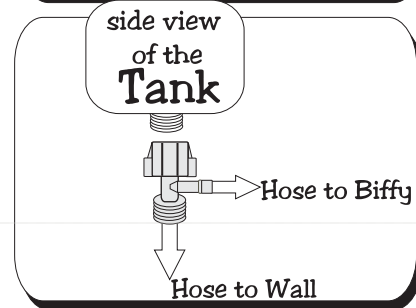


3

***MAKE SURE WATER LINE IS CLEAR OF DEBRIS AND/OR SEDIMENT.**

***THE BIFFY AIRGAP/ANTI-SIPHON FEATURE WORKS BEST WHEN THE WATER SUPPLY VALVE IS AT FULL PRESSURE.**

IMPORTANT: Check for any water leakage. To test the installation for leaks, run water through the Biffy for 30 seconds. Consult a professional for installation assistance if necessary. As with all plumbing appliances, if your Biffy is left unattended for greater than one day, we recommend that the water supply be turned off.


Seat Bumpers

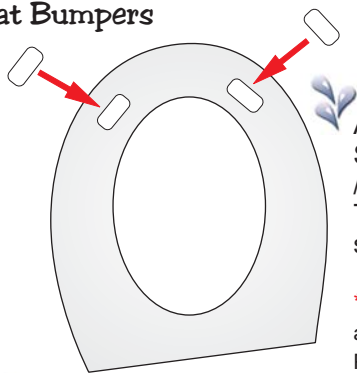

Attach two to four of the supplied Seat Bumpers as shown to raise / level the seat. This is important to allow the spray arm to move freely.

***Some plastic coated seats may require an additional adhesive. Please contact us for a Loctite All-Plastics Super Glue.**

Waterdrop Lever

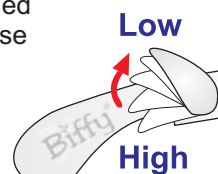

Adjust waterdrop lever on handle for water pressure control. Water drop lever is for adjusting the water spray: it is **NOT** an on/off valve.

Cleaning:

The Biffy® is easily cleaned with normal bathroom maintenance. To keep its shine, avoid abrasive cleaners.

Biffy®